


# TORQUÍMETRO DE ESTALO



IST-WM110

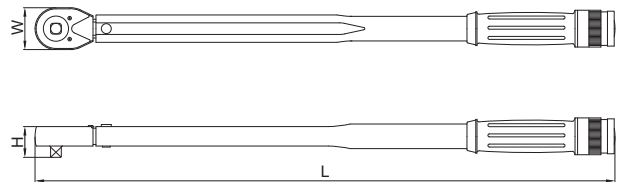

Ajuste fácil:



1 - Destruar



2 - Ajuste do torque



3 - Travar

## ESPECIFICAÇÕES:

Código	IST-WM30	IST-WM110	IST-WM210	IST-WM350	IST-WM500	IST-WM700	IST-WM980	IST-WM1500
Capacidade	6~30N.m	19~110N.m	40~210N.m	70~350N.m	100~500N.m	140~700N.m	140~980N.m	300~1500N.m
Exatidão	±4%	±4%	±4%	±4%	±4%	±4%	±4%	±4%
Graduação	0.2N.m	0.5N.m	1N.m	2.5N.m	2.5N.m	2.5N.m	7N.m	10N.m
Encaixe (D)	1/4"	3/8"	1/2"	1/2"	3/4"	3/4"	1"	1"
Dimensões (LxWxH, mm)	295x28x20	385x37x27	530x47x33	645x47x37	860x73x51	1085x73x51	1230x73x59	1700x80x67
Peso	740g	960g	1700g	2540g	3660g	5940g	6460g	11580g